

SOPHOS

Wall Mounting Instructions 2.5Gbit PoE++ Injector (60W)

There are two options to install the Sophos PoE++ injector (60w 802.3bt): place it on a desk/tabletop (using rubber pads), or mount it on a wall. The following sections provide detailed instructions for the wall mount option.

Wall mount




You can hang the unit on the wall by using the wall mount keyholes on the rear.

Instructions for using the keyholes are shown below.

Mounting instructions


Please note: To avoid potential injury, the unit should not be mounted more than 2m above the ground.

For wall mounting, we recommend using wall plugs and screws with the dimensions shown below (as supplied):

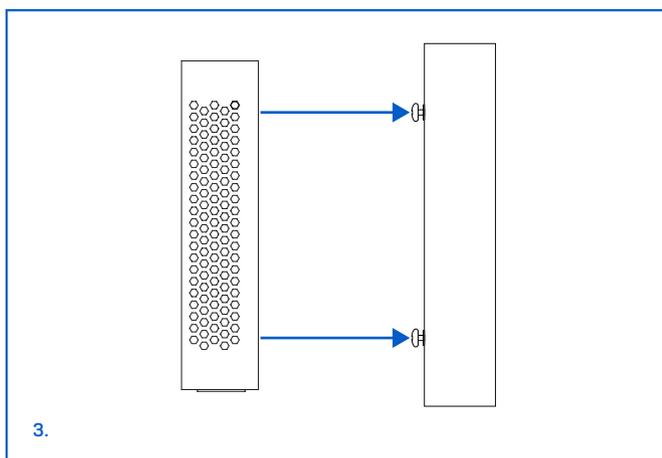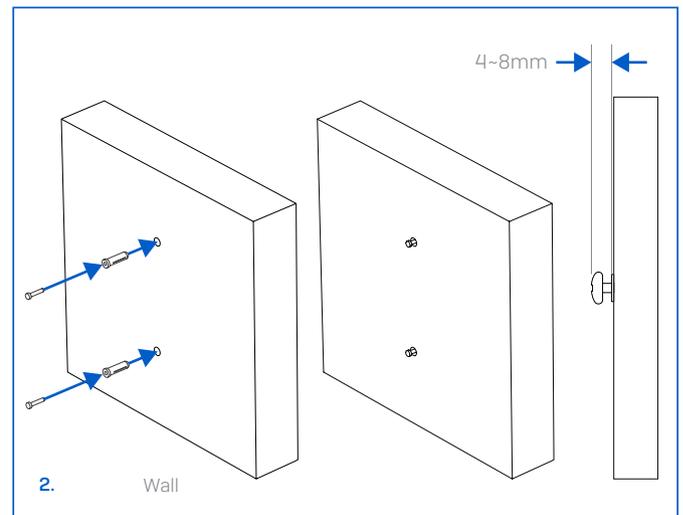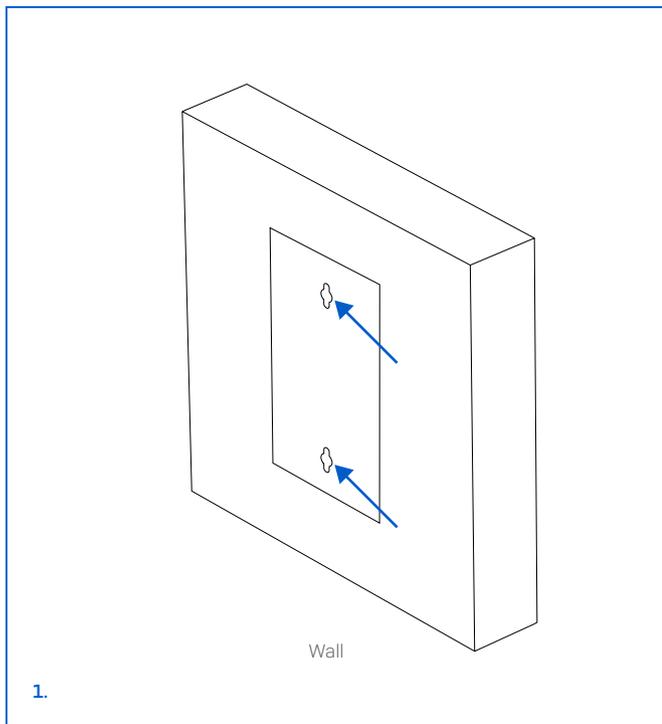

1. Use the wall mount template (next page) to mark the screw mounting positions on the wall.
2. Drill 2 wall anchors into the wall at the marked positions and screw 2 screws into them. Make sure they stand out 4-8mm.
3. Hang the PoE++ injector on the wall by aligning the key holes with the mounted screws.

PoE++ Injector (60W) Wall Mount template Do not shrink to fit when printing

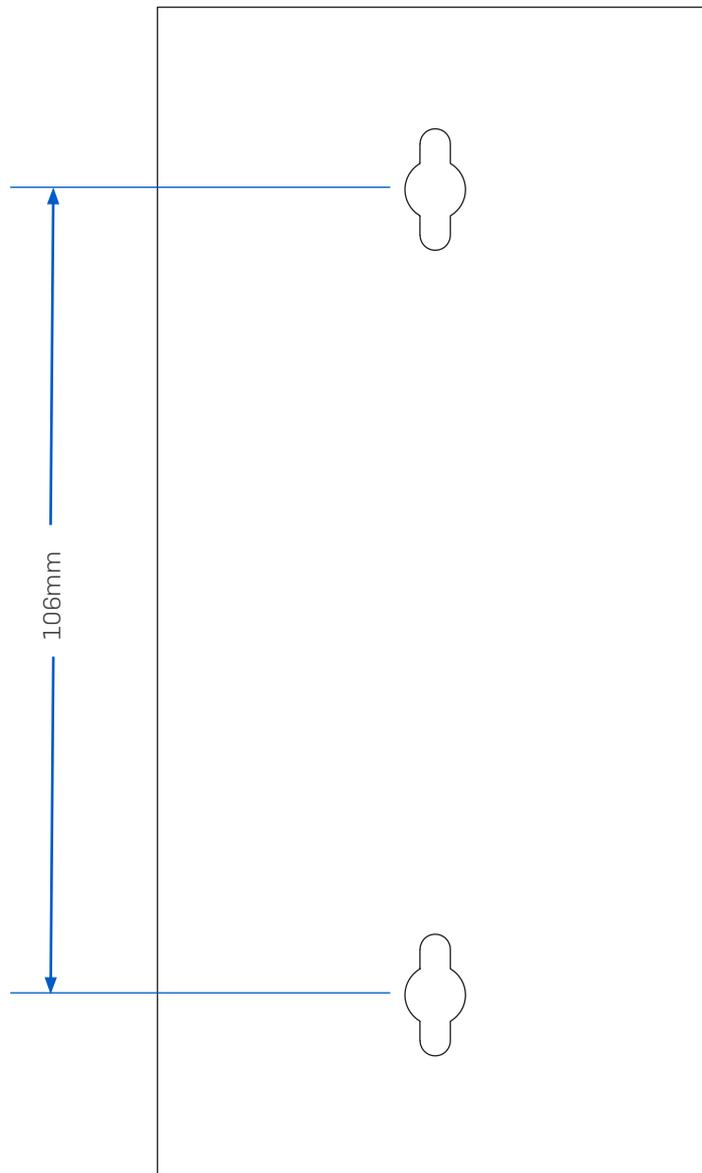

United Kingdom Sales
Tel.: +44 (0)8447 671131
Email: sales@sophos.com

North American Sales
Toll Free: 1-866-866-2802
Email: nasales@sophos.com

Sales DACH
[Deutschland, Österreich, Schweiz]
Tel.: +49 (0) 611 585 8-0
Tel.: +49 (0) 721 255 16-0
E-Mail: sales@sophos.de

Australia and New Zealand Sales
Tel: +61 2 9409 9100
Email: sales@sophos.com.au

Japan Sales
Tel.: +81 3 3568 7550
Email: sales@sophos.co.jp

China Sales
Tel.: +86-10-6567 5820
Email: sales@sophos.co.jp

Shanghai Sales
Tel.: +86-21-32517160
Email: sales@sophos.co.jp