


SOPHOS





Security made simple.

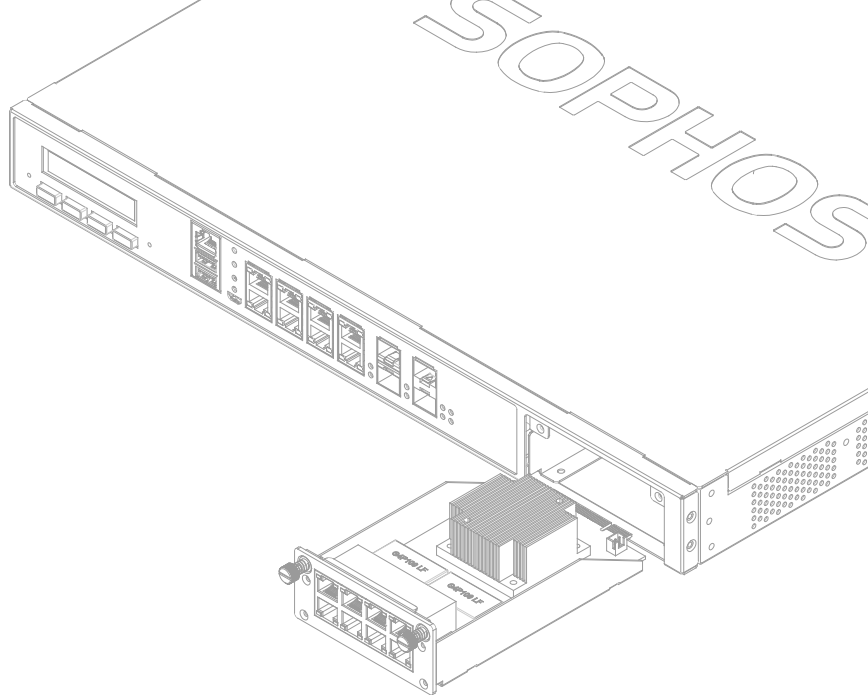

LAN Modules Mounting Instructions

SG/XG 210 Rev. 3, SG/XG 230/310/330/430/450 Rev. 2

LAN Modules Mounting Instructions

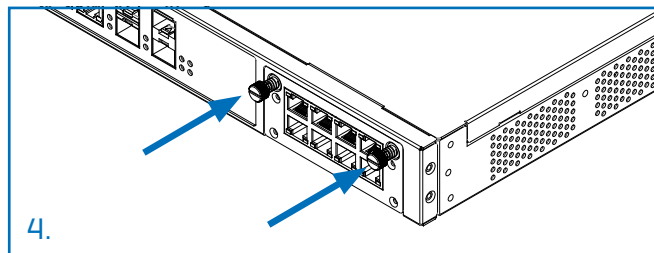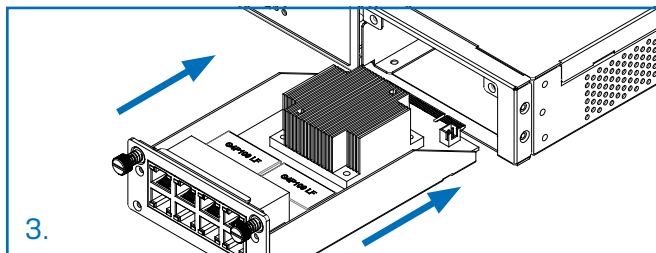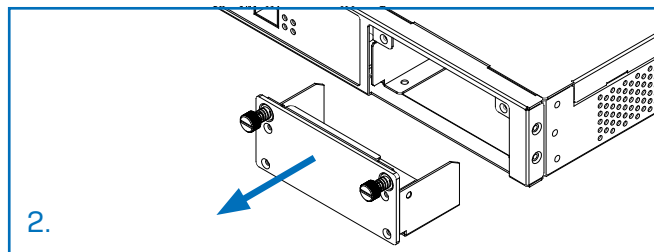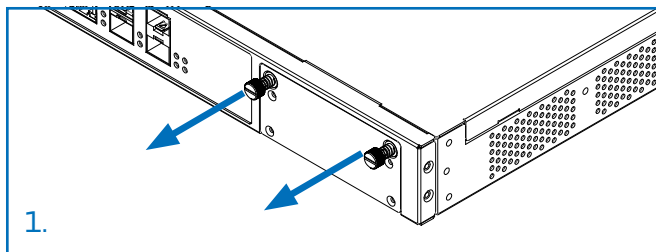

Please note

Before installing/removing any LAN module please make sure that the appliance is powered off and power cables are removed.

Mounting

1. Unscrew the metal plate from the vacant slot you want to use
2. Remove the metal plate
3. Insert the LAN module into the open slot
4. Tighten the screws of the LAN module

LEDs on each Ethernet connector

For RJ45 Ethernet connector

ACT/LINK (Left LED)	Green	Constantly	1. The Ethernet port is receiving power. 2. Good linkage between the Ethernet port and hub.
		Flashing	The adapter is sending or receiving network data. The frequency of the flashes varies with the amount of traffic.
		Off	1. The adapter and switch are not receiving power.
			2. No connection between both ends of network. 3. Network drivers have not been loaded or do not function correctly.
SPEED (Right LED)	Amber	On	The Ethernet port is operating at 1,000 Mbps.
	Green	On	The Ethernet port is operating at 100 Mbps.
		Off	The Ethernet port is operating at 10 Mbps.

For SFP connector

ACT/LINK	Green	Constantly	1. The SFP connector is receiving power. 2. Good linkage between the SFP connector and hub.
		Flashing	The adapter is sending or receiving network data. The frequency of the flashes varies with the amount of traffic.
		Off	1. The adapter and switch are not receiving power.
			2. No connection between both ends of network. 3. Network drivers have not been loaded or do not function correctly.





For SFP+ connector

ACT/LINK (Left LED)	Green	Constantly	1. The SFP+ connector is receiving power. 2. Good linkage between the SFP+ connector and hub.
		Flashing	The adapter is sending or receiving network data. The frequency of the flashes varies with the amount of traffic.
		Off	1. The adapter and switch are not receiving power.
			2. No connection between both ends of network. 3. Network drivers have not been loaded or do not function correctly.
SPEED (Right LED)	Blue	On	The SFP+ connector is operating at 10,000 Mbps.
		Off	Either The SFP+ connector is operating at 1,000 Mbps or the LED is not working.

For LAN Bypass connector

LAN Bypass Active	Green
LAN Bypass Off	Off

Montageanleitung für LAN-Module

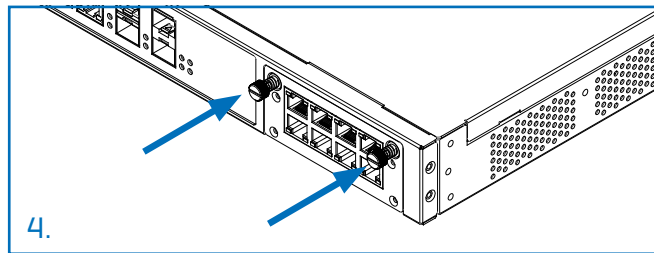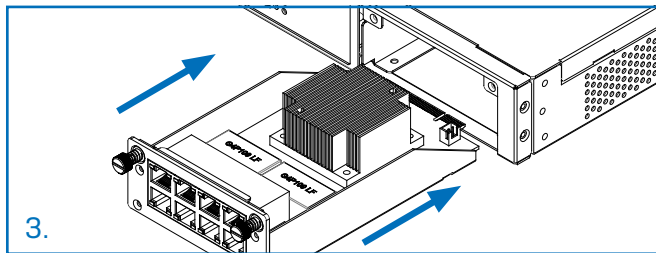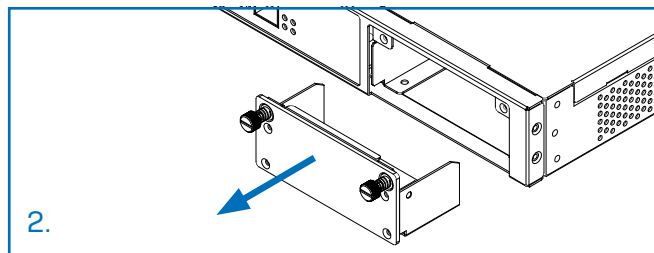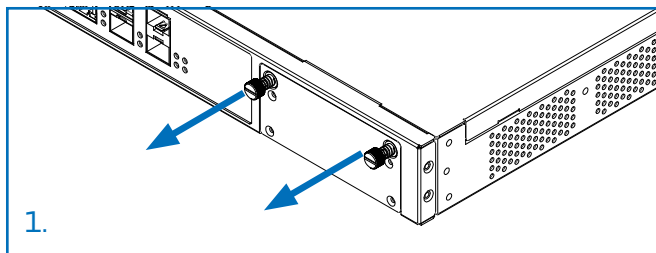

Hinweis

Vergewissern Sie sich vor dem Einbau oder Ausbau von LAN-Modulen, dass die Appliance ausgeschaltet ist und die Stromkabel abgezogen wurden.

Montage

1. Schrauben Sie die Metallplatte von dem freien Slot ab, den Sie verwenden möchten.
2. Nehmen Sie die Metallplatte ab.
3. Führen Sie das LAN-Modul in den offenen Slot ein.
4. Schrauben Sie das LAN-Modul fest.

LEDs am jeweiligen Ethernet-Anschluss

RJ45 Ethernet-Anschluss

ACT/LINK (Linke LED)	Grün	Leuchtet	1. Der Ethernet-Port wird mit Strom versorgt. 2. Verbindung zwischen Ethernet-Port und Hub funktioniert.
		Blinkt	Der Adapter sendet oder empfängt Netzwerkdaten. Die Blinkfrequenz hängt von der Menge des Datenverkehrs ab.
		Aus	1. Adapter und Switch werden nicht mit Strom versorgt. 2. Keine Verbindung zwischen beiden Netzwerken.
			3. Netzwerktreiber wurden nicht geladen oder funktionieren nicht richtig.
GESCHWINDIGKEIT (Rechte LED)	Gelb	Ein	Der Ethernet-Port arbeitet mit 1.000 Mbps.
	Grün	Ein	Der Ethernet-Port arbeitet mit 100 Mbps.
		Aus	Der Ethernet-Port arbeitet mit 10 Mbps.

SFP-Anschluss

ACT/LINK	Grün	Leuchtet	1. Der SFP-Anschluss wird mit Strom versorgt. 2. Verbindung zwischen SFP-Anschluss und Hub funktioniert.
		Blinkt	Der Adapter sendet oder empfängt Netzwerkdaten. Die Blinkfrequenz hängt von der Menge des Datenverkehrs ab.
		Aus	1. Adapter und Switch werden nicht mit Strom versorgt. 2. Keine Verbindung zwischen beiden Netzwerken.
			3. Netzwerktreiber wurden nicht geladen oder funktionieren nicht richtig.

SFP+ Anschluss

ACT/LINK (Linke LED)	Grün	Leuchtet	1. Der SFP+ Anschluss wird mit Strom versorgt. 2. Verbindung zwischen SFP+ Anschluss und Hub funktioniert.
		Blinkt	Der Adapter sendet oder empfängt Netzwerkdaten. Die Blinkfrequenz hängt von der Menge des Datenverkehrs ab.
		Aus	1. Adapter und Switch werden nicht mit Strom versorgt. 2. Keine Verbindung zwischen beiden Netzwerken.
			3. Netzwerktreiber wurden nicht geladen oder funktionieren nicht richtig.
Geschwindigkeit (Rechte LED)	Blau	Ein	Der SFP+ Anschluss arbeitet mit 10.000 Mbps.
		Aus	Entweder arbeitet der SFP+ Anschluss mit 1.000 Mbps oder die LED funktioniert nicht.

LAN Bypass-Anschluss

LAN Bypass aktiv	Grün
LAN Bypass aus	Aus

LAN Modules Mounting Instructions

Sales DACH
(Deutschland, Österreich, Schweiz)
Tel.: +49 [0] 611 585 8-0
Tel.: +49 [0] 721 255 16-0
E-Mail: sales@sophos.de

United Kingdom and Worldwide Sales
Tel: +44 [0]8447 671131
Email: sales@sophos.com

Asia Sales
Tel: +65 62244168
Email: salesasia@sophos.com

North American Sales
Toll Free: 1-866-866-2802
Email: nasales@sophos.com

Australia and New Zealand Sales
Tel: +61 2 9409 9100
Email: sales@sophos.com.au

© Copyright 2018. Sophos Ltd. All rights reserved.
Registered in England and Wales No. 2096520,
The Pentagon, Abingdon Science Park, Abingdon, OX14 3YP, UK
Sophos is the registered trademark of Sophos Ltd. All other product and company names
mentioned are trademarks or registered trademarks of their respective owners.

18-02-22 QSG [2927-DD]

The logo for Sophos, featuring the word "SOPHOS" in a bold, blue, sans-serif typeface.