

## Wallmount Instructions XGS 116(w)/126(w)/136(w)

There are various options available allowing you to hang your XGS appliance on the wall or mount it to a DIN Rail or into a rack. The following sections provide detailed instructions for the Wall mount option.



### Wall mount

You can either hang the unit on the wall by using the wall mount keyholes on the rear of the unit or by using the rackmount kit which is available as an optional accessory. The following procedure explains how to use the keyholes.

### Mounting instructions


**Please note:** To avoid potential injury the appliance should not be mounted higher than 2m above the ground.

For wall mounting we recommend using wall plugs and screws with dimensions shown below:

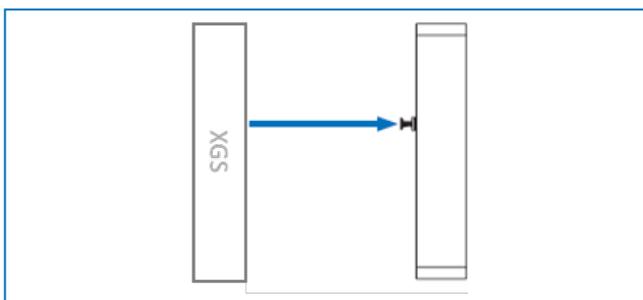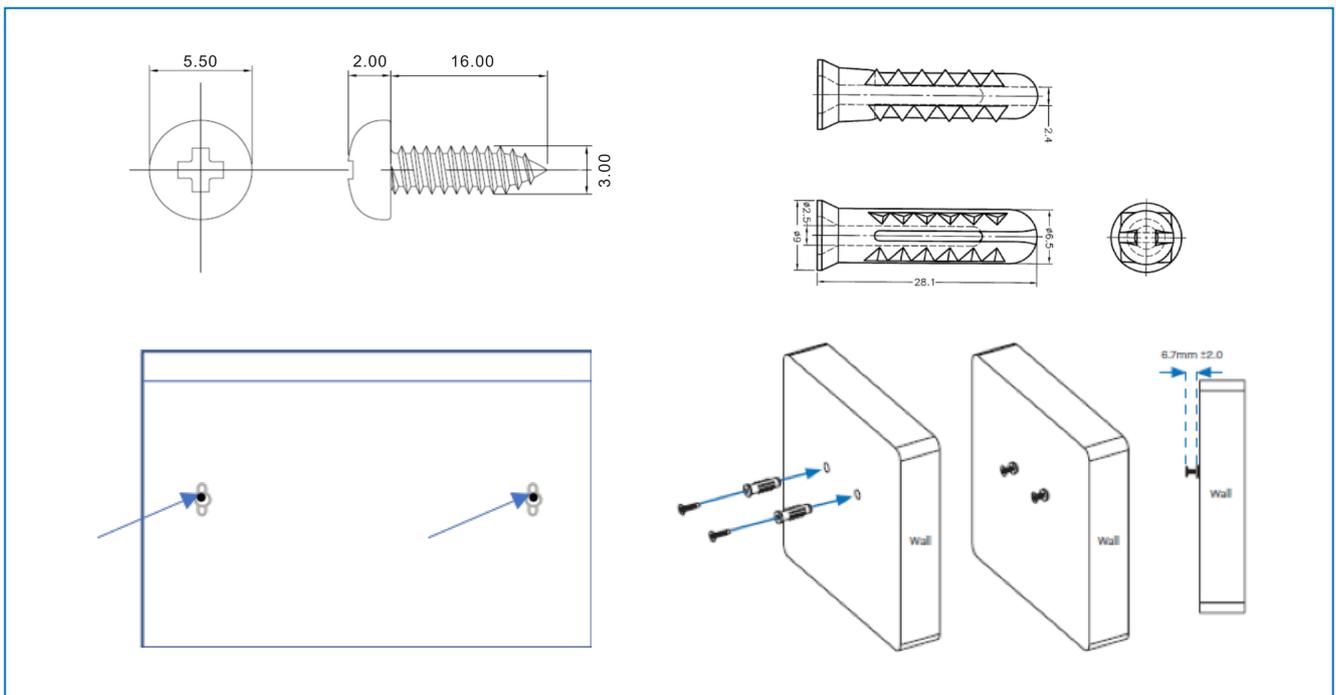

1. Use the wall mount template (next page) to mark the screw mounting positions on the wall.
2. Drill 2 wall anchors into the wall at the marked positions and screw 2 screws into them. Make sure they stand out 4~8mm.
3. Hang the XGS unit on the wall by aligning the key holes with the mounted screws.

XGS 116(w)/126(w)/136(w) Wallmount template Do not shrink to fit when printing

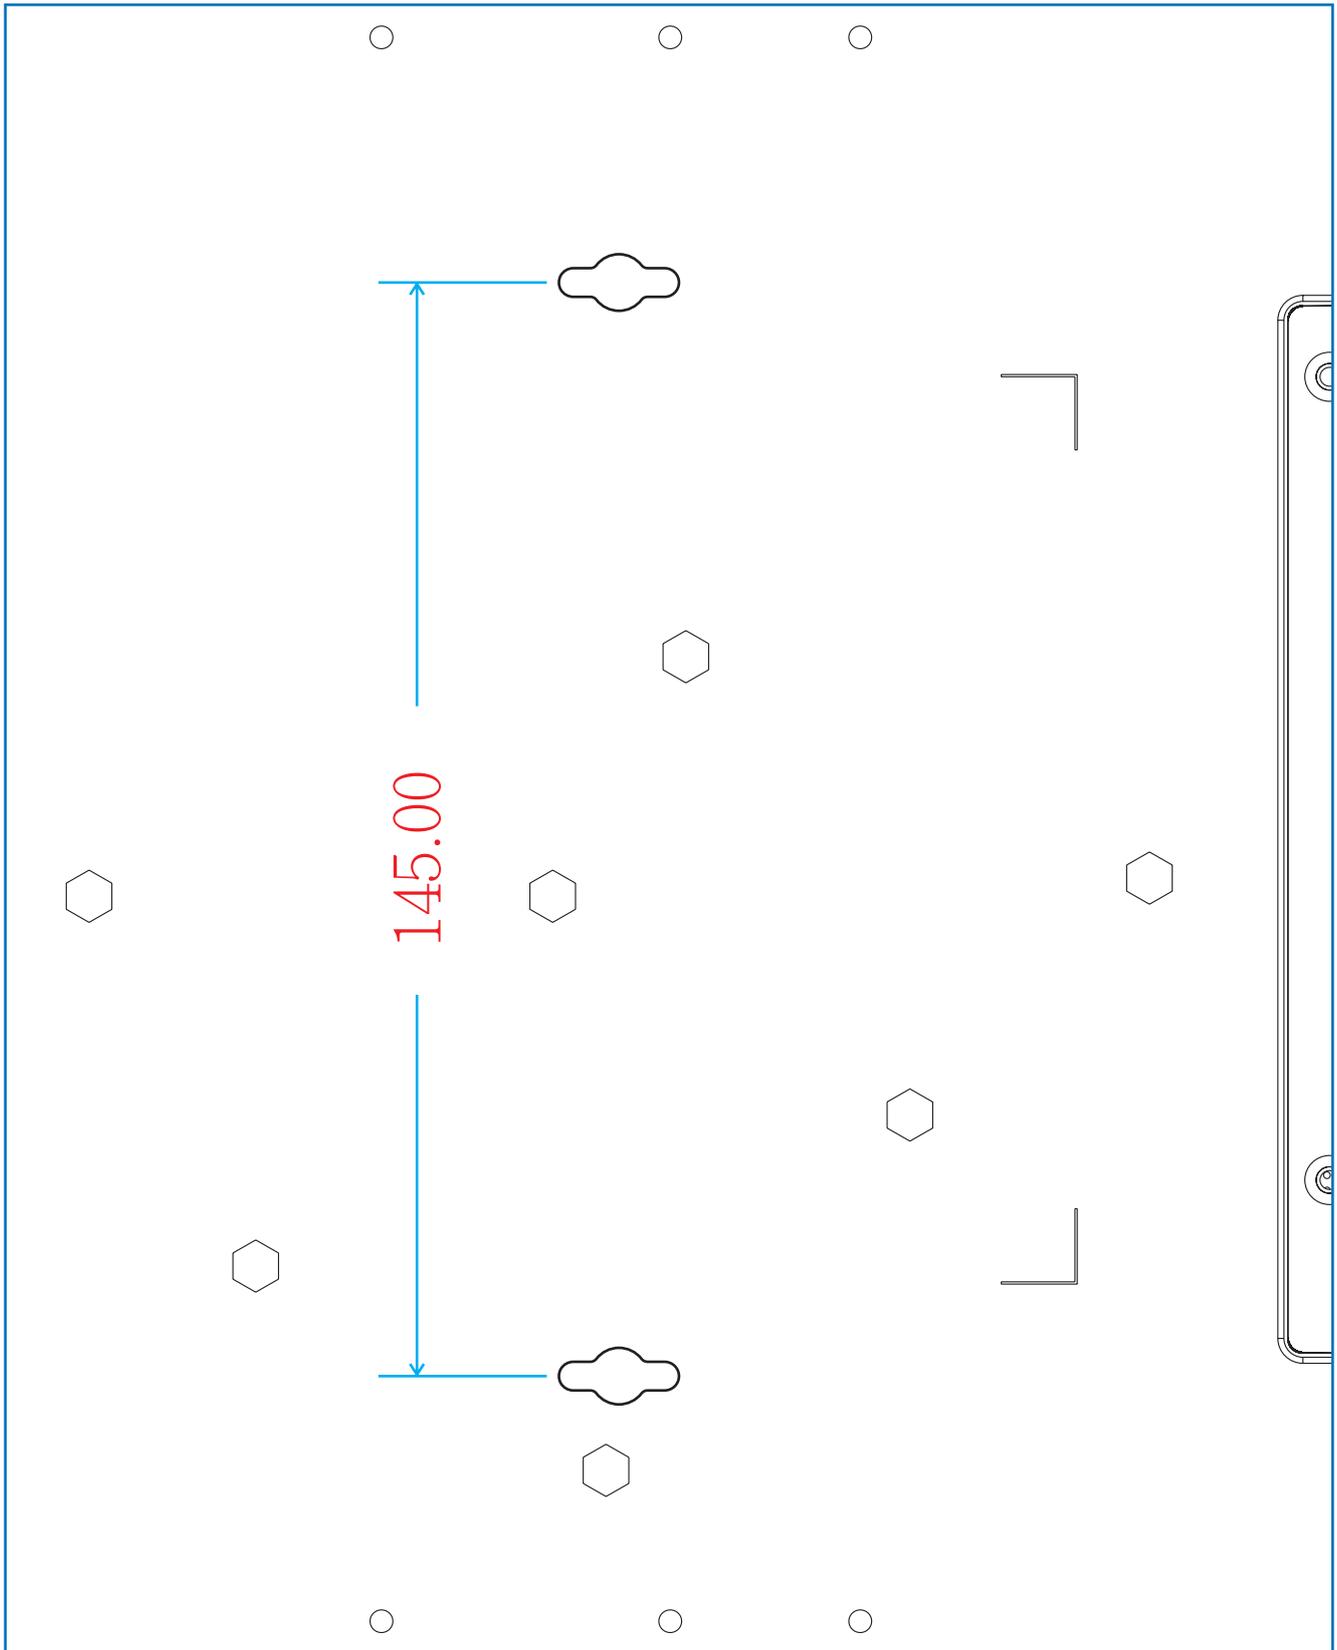

United Kingdom and Worldwide Sales  
Tel: +44 (0)8447 671131  
Email: sales@sophos.com

North American Sales  
Toll Free: 1-866-866-2802  
Email: nasales@sophos.com

Australia and New Zealand Sales  
Tel: +61 2 9409 9100  
Email: sales@sophos.com.au

Asia Sales  
Tel: +65 62244168  
Email: salesasia@sophos.com